


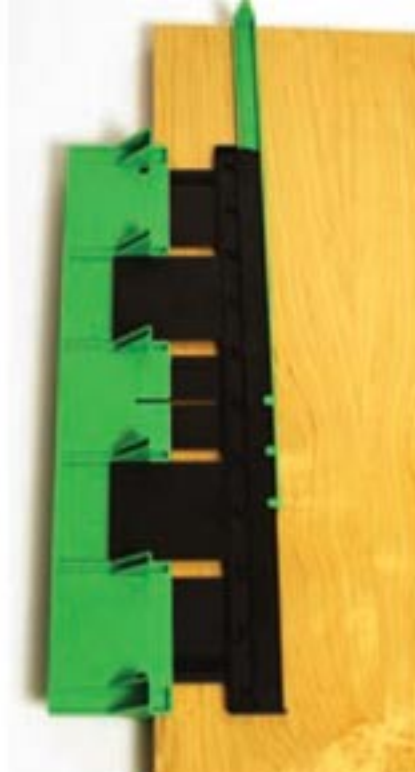

Step 1

Firstly, determine the distance from the top of the door where the first hole is required.




Step 2

Then determine the distance from the side of the door where the first hole is required.



Step 3

Using either a 2 mm pilot drill bit or an awl, mark the door where the first hole is required.

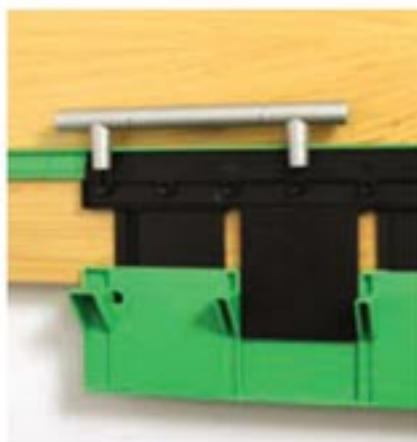

Step 4

For a standard hole centre, simply read off the scale the desired hole centres and mark the door with the position of the second hole.



Step 5

The jig is now set up for all doors in the kitchen and each door can quickly be marked out ready for drilling.