



We recommend consulting a professional if you are unfamiliar with installing hardware fixtures.


1. At your desired height, position the lock on the door where it is to be fixed. (Fig. 1) Mark around the edge of the forend with a Pencil or Bradawl.

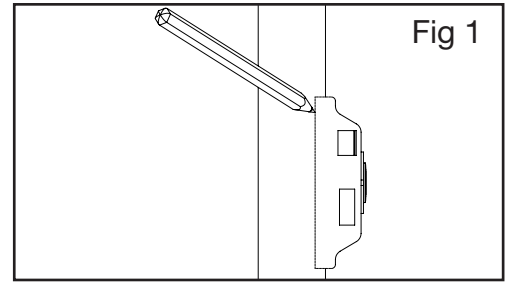

2. Making sure that the lock forend is flush with door edge, chisel out the door edge to accommodate lock (Fig. 2).

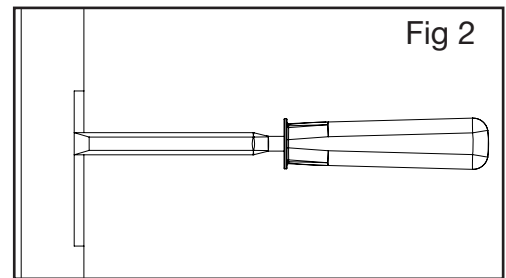

3. Place the lock on the door and mark down the spindle hole and the key hole with a pencil or bradawl (Fig. 3).

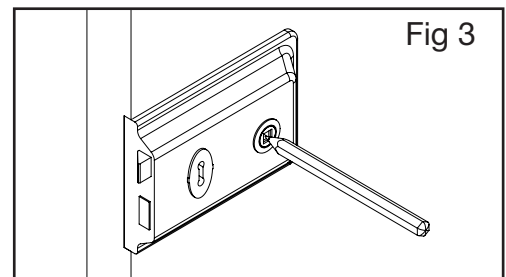


4. Drill through marked holes for the spindle and the keyhole (Fig. 4).

5. Check that the centres align correctly and fix the lock to the door and the frame with the screws provided. It is recommended that you drill pilot holes for the face-fixing screws.

6. Prior to closing the door, fix furniture and test the deadbolt operation.

7. With the bolt in the locked position, close the door and mark the position of the bolt and the latch on the door frame. With a pencil or bradawl mark the position of the keep on the frame and fix it with the screws provided.

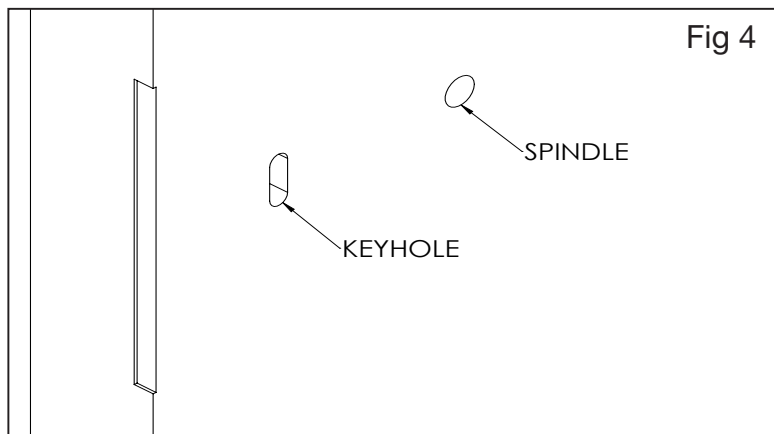

Drawings are not to scale.