


# SMARTLATCH



**FIT 'ME'  
IN UNDER  
FIVE  
MINUTES**

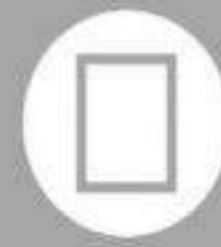

**Step 1**

**Step 2**

**Step 3**



Using a 25mm drill bit,  
bore out to 75mm in depth



Using the same bit, drill the  
hole for the spindle



Then simply  
insert the latch