## **Technical** Data Sheet



## FBP138K(finish) FORME® VALENCE

Product Code

Product Name

**Product Description** 

Product Base Material

Available Finishes

FBP138K(finish)

FORME® Valence Lever on Backplate

FORME® Valence Lever on Key Backplate with 57mm Centers - Sprung

Solid Brass Lever & Solid Brass Backplate


Polished Chrome (PC) Polished Brass (PB) Satin Chrome (SC) Yester Bronze (YB)


Matt Black (MB)

Other Information

To be cleaned using a soft damp cloth. Chemicals, solvents or abrasives will damage the applied finish. Suitable for Fire Doors FD30/60. Supplied 2 x Bolt Supplied with Wood Screws.

10 Year Mechanical Guarantee subject to fitting requirements.

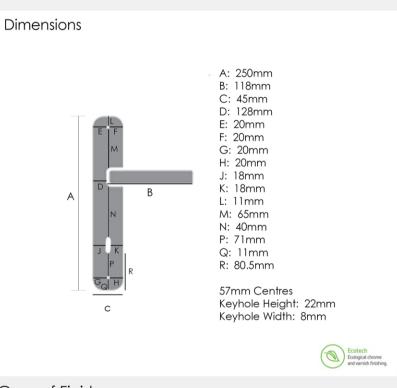

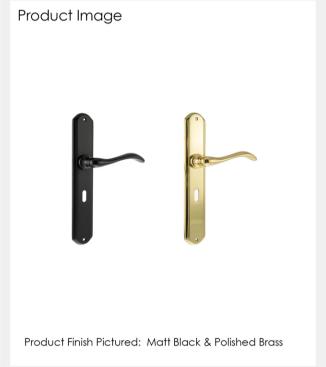

## Care of Finish

In the unusual event of this product failing mechanically, we will replace it free of charge, providing you can supply us with the faulty product and a receipt to show proof of purchase. If the items are not fitted in accordance with the fitting instructions, in a correct application, this many not apply.

These latches have an applied finish, and we do recommend regular cleaning with a soft cloth. If necessary, you may moisten the cloth, with water. If this is not effective in removing accumulated deposit, try using a PH neutral soap on a soft cloth, then remove soap immediately after application, with the help of a clean, moist, soft cloth. Under no circumstances should you use an abrasive/hard tool, chemical, acidic or abrasive substance to clean these locks. This will break down the applied finish. The finish may chip or scratch if subjected to impact from sharp items such as keys and jewellery. Atlantic UK retain the right to send items away for chemical testing to analyse if the product has come into contact with any abrasive or chemical substance before issuing replacements.

Please be aware that environments where there are high concentrations of chemicals in the air, for example from use of low quality paint or corrosive agents, corrosion and damage may occur to the surface of the lock. Locks should therefore not be fitted in such environments, until the high concentration of chemicals in the air have subsided.